User Instructions




MEDX2KEY
Wireless USB 2.4 Ghz Keyboard



INDEX

page i	General Overview / Charging the Reyboard
page 2	Connecting the USB Receiver
page 3	General Operation
page 4	Using the Keyboard
page 5	Warranty

General Overview

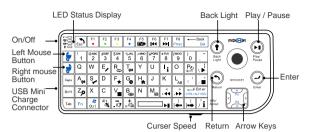







Red LED

'off' -- battery ok 'flashing' -- low battery Yellow LED 'on' -- charging



 Plug in the supplied USB Mini connector into the side of the keyboard unit and plug the USB male into your Mede8er's USB host port or the USB port on your PC.



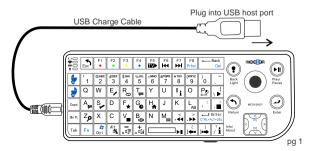

MEDX2KEY Wireless USB 2.4 Ghz Keyboard



www.mede8erforum.com

www.mede8er.com www.mede8er.eu

For more information or support please visit www.mede8er.eu/support/ or call +31(0)10-7142861 during business hours.

* Specifications subject to change without notice.



Sanji Electronics (Pty) Ltd 106 16th Road, Midrand, Gauteng, South Africa.
Tel +27(11)266 7500 E Mail: sales@mede8er.com




Europe: IBDL BV. Fermiweg 9-11, 3208KT Spijkenisse, Netherlands. Tel: +31(10)7142861. Trade: sales@mede8er.eu Warranty and support: support@mede8er.eu

Connecting the USB Receiver



Red I FD

'off' -- good rf connection 'flashing' -- no rf connection

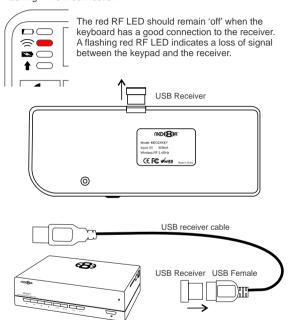

The range of the keyboard can be effected by metal content so we suggest that the USB receiver be placed away from the player or any other metal object. Unclip the USB receiver from the keyboard and plug in into the USB Female connector. Plug the male USB into one of the USB host ports on the Mede8er. Position the USB Receiver as far away from the player as possible with clear sight to the keyboard.

Caps Lock - Red LED Solid





The caps lock LED will light solid red when in caps lock mode.



Auto Shut Down

The keyboard will automatically shut down if no keys are pressed within a 5 minute period.

Back Light Function

Press the Back Light button to light up the keyboard. The Back Light will automatically switch off 30 seconds after the last keyboard stroke. You can also switch it off manually by pressing the Back Light button.



 
Curser Speed Adjust

Press the Curser Speed adjust button and the curser speed will change to the next speed. Available speeds High - Medium - Low



Keyboard Reset

The Keyboard can be reset to default operation in the event of incorrect system operation. To reset the Keyboard press the reset button for 3 seconds.



Using the Keyboard

The preferred way of using the MEDX2KEY for Internet Media browsing is to hold the keyboard with both hands. Use your left thumb to control the left/right mouse buttons and your right thumb to control the trackball and the arrow buttons.



Keyboard Commands

FSC: RETURN 'F(f)': Favourite 'E(e)': EDIT SPACE: PLAY ENTER: SELECT(ENTER) 'M(m)': MENU 'S(s)': Setup '0': 0 11:1 'V(v)': View 121.2 'L(Ì)': AB 3'-3 '\(|)': SLOW '4': 4 ''(")': STOP '/(?)': Info / About '5': 5 '6': 6 '[({)': Back Skip '7': 7 '](})': Forward Skip 'B(b)': Browser - Devices '8': 8 '9': 9 'Alt': Mute '-': VOL DOWN 'FI': Red button '+': VOL UP 'F2': Green button 'P': SHIFT + 'P' = POWER OFF 'F3': Yellow button 'F4': Blue button 'R(r)': REPEAT 'F5': TV Sys 'T(t)': SUBTITLE 'I(i)': INFO 'F6': Previous Chapter 'A(a)': AUDIO 'G(g)': GOTO

'A(a)': AUDIO 'F7': Next Chapter
'G(g)': GOTO
'H(h)': HOME
'Z(z)': ZOOM - Media Library
'Ctrl': ZOOM - Internet Browser/YouTube
'(<)': FRWD

'.(>)': FFWD '/(?)': Info / About

Warranty

Mede8er products carry a 24 month from date of purchase warranty. In the event of warranty service please provide proof of purchase. Return your product to the store that it was purchased from or return it directly to Sanji Electronics (Pty) Ltd 106, 16th Rd Midrand, Gauteng, South Africa.

Warranty does not cover damage by

- a) Lightning or over voltage
- b) Water damage or liquid spill c) Misuse or abuse
- d) User tampering

Sanji Electronics is not responsible for any loss of data irrespective of the cause.

Important Safety Instructions

- ·Read these instructions for all components before using this product.
- Do not use this apparatus near water or moisture. Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
- ·Clean only with a soft dry cloth and as directed by the manufacturer.
- ·Do not use near any heat sources, such as radiators, heat registers, stoves or other apparatus that produce heat.
- Only use attachments or accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time to prevent damage to this product.

Refer all servicing to qualified service personnel